

How BlueGuards works

Jan 2009

Copy the cab file (BlueGuardsV2.0)
to your Windows device under
Program Folder



Install

Install BlueGuardsV2.0 to your device




Configure

Start and complete configuration



Run

Bluetooth lock and unlock
Range (1-10 meter)

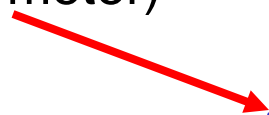

Mobile device is normal when the headset is close.



Locked

Bluetooth lock range.



Mobile device is locked when the headset is not close.



Unlocked

Bluetooth unlock range
(1-10 meter)



Mobile device will automatically unlock when the headset get close again.

